



# LAMELLA

## Installation guide for electric screens

### Explanation of remote control buttons/functions



- Up
- Stop
- Down
- Change channel/sceen



Reset button

## **Screen verbinden met afstandsbediening**

### **Step 1:**

Keep the top button (up) pressed until the blue letters stop flashing.

### **Step 2:**

Turn on the power to the screen.

### **Step 3:**

The screen jogs (moves back and forth), and the remote control is fully installed.

### **Step 4:**

If you want to watch an instructional video for this manual, scan the QR code below.

- To operate both screens simultaneously, follow the same steps mentioned above on the same channel.
- To operate the second screen separately, follow the same steps mentioned above but choose a different channel.



## **Limit position (this sets the starting position of your screen)**

### **Step 1:**

Press the reset button until the screen jogs once.

### **Step 2:**

Move the screen up or down to the desired position.

### **Step 3:**

Press the reset button once with a screwdriver or pointed object.

### **Step 4:**

The motor jogs once, and the limit is set.

## **Limit end position (this sets the ending position of your screen)**

Adjusting the end positions

### **Step 1:**

Let the motor roll to the desired position with the remote control.

### **Step 2:**

Press the reset button with a screwdriver or pointed object until the motor jogs once.

### **Step 3:**

Press the reset button with a screwdriver or pointed object until the motor jogs once. The end position is now adjusted.

## **Adjusting the end/start positions**

### **Step 1:**

Let the motor roll to the limit you want to change with the remote control.

### **Step 2:**

Press the reset button with a screwdriver or pointed object until the motor jogs once.

### **Step 3:**

Now set the screen to the desired position with the remote control, then press the stop button.

### **Step 4:**

Press the reset button with a screwdriver or pointed object until the motor jogs once. The position is now adjusted.

## Resetting

### Step 1:

Press and hold the 'stop' button (circled in white in the photo) until the motor jogs (movement back and forth. The screen will move slightly up and down). Once the motor has jogged, you can release the stop button. Proceed to step 2.



### Step 2:

Press with a screwdriver or another small pointed object on the circled button (middle button) until the motor jogs twice. It is now reset.

