



Installation guide wooden walls

Step 1: Read the entire manual so you have a good overview of the steps that need to be followed.

Step 2: Cut the 5x7 beams to size and create a frame (see photo below). Use the long screws for this. You can drill these screws into the frame. We advise pre-drilling.



Step 3: After you have made the frame in the canopy, you can attach the boards to it. Start from the top. Drill the wooden boards to the frame. The top board should be level with the top of the rain gutter.


Attention: If you have a double-walled wall, we advise starting from the back. Then you can finish the front side, which is often the easiest to access.



Step 4:

You have correctly installed the wooden walls.

Note: ensure the bottom wooden wall is always slightly off the ground to allow for drainage and prevent moisture damaging the wood! See the photo below for a correct example.

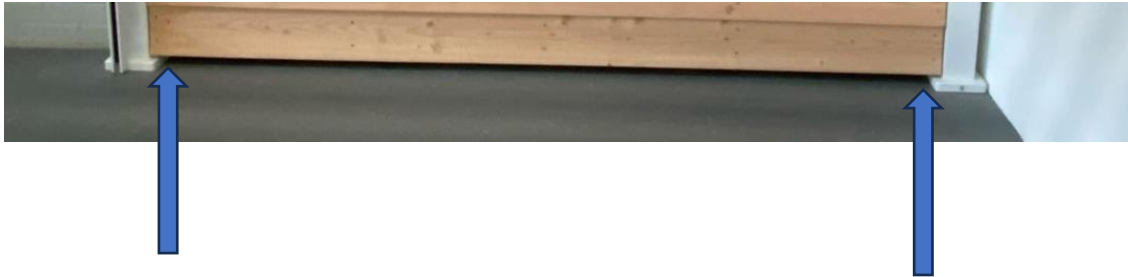

Best wishes from the Lamella team on your wooden walls!